

FM Transmitter Operation Manual

FEATURES

- Built-in FM Transmitter, Full Frequency: 87.5-108MHz
- Supports USB/SD Card
- Line-in Function Supports iPad, iPod, Normal MP3/4, Cell Phone Line-out, etc.

USING THE FM TRANSMITTER

- Insert the FM transmitter into your vehicles cigarette lighter or power port.
- Tune your radio to a desired FM frequency, then match the frequency with the frequency on your radio. You can do this by using the buttons on the unit or with the supplied remote control.
- If using a USB or SC card; plug it into the FM transmitter in the USB slot on the bottom of the unit. It will transmit the MP3 files automatically. (You must copy the MP3 files onto the USB disk or SD card in advance)
- This FM transmitter also supports other devices such as MP3 players, cell, phones, etc. Using the 3.5mm audio cable provided; plug one jack into this transmitter and plug the other end into the audio output of the device with the music source. It will play and transmit the songs from the audio source. To control the song selection simply use your device (source) to select which song to play.
- If you are using this device with a satellite radio receiver simply connect the 3.5mm audio cable to the audio output of the satellite radio receiver. This may be directly from the receiver or from the receivers docking cradle. Use the supplied USB power cables to power your receiver. Be sure to select the correct USB power cable for your specific receiver. Included in the package is (1) Legacy and (1) PowerConnect power cable.
- Follow the instruction above for matching the station frequency with the transmitter and audio should begin to play through the car speakers.

HOW TO SET THE FM FREQUENCY TO REMEMBER FM SETTINGS

- Insert SD card or USB flash driver into the transmitter.
- When the transmitter begins playing music, adjust it to your desired frequency (for example 89.9 MHZ).
- When the transmitter goes back to showing the playing screen from frequency screen, press "previous" , "next" or "pause" button on the remote control to save the frequency.
- The next time you insert the transmitter into the cigarette lighter, the default frequency will be the frequency (89.9 MHZ) you saved.

Manufactured by

Operation Guide	FM Transmitter	Remote Control
1. How to Play and Stop Music	Press "PLAY" Button: Play the Music Second Press "PLAY" Button: Stop Music	Press ▶ / Button
2. How to Adjust the Volume	Long Press ▶▶ Button: Increases Volume Long Press ◀◀ Button: Decrease Volume	Press "+" to Increase Volume Press "-" to Reduce Volume
3. How to Change Frequency	Press "CH" Button First, then Press: ▶▶ Increase the Frequency Press: ◀◀ Decrease the Frequency	Press "CH+" Button: Increase 0.1 MHz Press "CH-" Button: Reduce 0.1 MHz, Press the Number of the Desired Frequency,
4. How to Choose Music	Short Press ▶▶ Button: Play the Next Song Short Press ◀◀ Button: Play the Previous Song	Press "NEXT" Button: Play the Next Song Press "PREV" Button: Play Previous Song Press the Song Number, Press ▶ / to Confirm
5. How to Set EQ	Not Supported	Press "EQ" Button to Select Favorite EQ Setting
6. How to Answer/Hand up Calls	Press ▶ / Button	Press 📞 / 📞 Button