Important Helix user controls

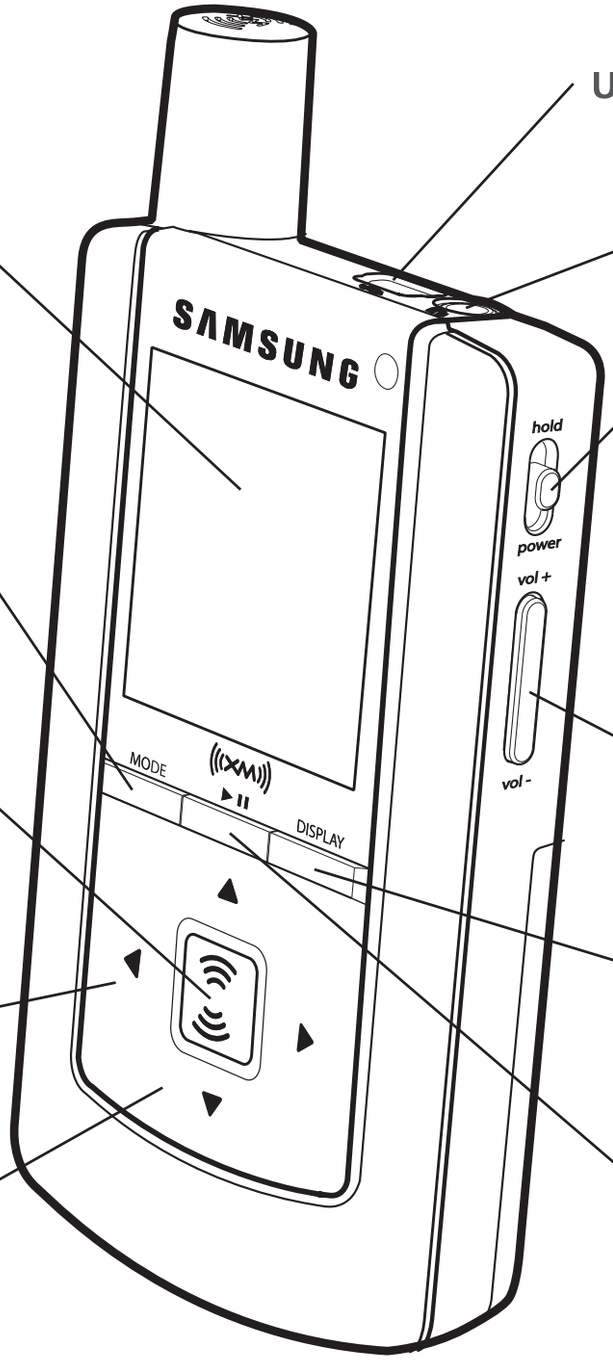

Display

USB jack

Earbud jack

Mode – Switch between "Live XM" or "My Music" (recorded content).

Power button – Slide down to turn power on or off. Slide up to "hold" controls, preventing you from accidentally pressing a button.

XM button – **Start here**; press to access channels, playlists, menus, and confirm selections.

Volume

Left arrow button – Pressing the left arrow button allows you to "back out" of any menu you have selected.

Display button – Change what's showing on the display.

Play/Pause

Arrow buttons Select menu entries, change channels.