



# WindowMate Express

PART NUMBER: WM-36EXP

The WindowMate Express is a premium suction mount for windshield or glass applications. Featuring an Express Mount attached to an integrated swivel, this mount is perfect for any electronic device using a button, leather case or OEM clip. It installs in seconds without tools and is easy to use.

**PARTS INCLUDED:** WindowMate Express, hardware pack, alcohol swab, belt clip and two buttons

Please read complete instructions before installing the WindowMate.

The WindowMate and glass should be at room temperature during installation.


## STEP 1.

WindowMate Express is designed to be attached to a windshield. Select a location that does not block your vision or controls. Clean the mounting surface with window cleaner to assure maximum suction. Bend the flexible arm into desired shape before attaching to window. Photo 1. If a leather case or OEM clip will be used, position the mounting plate with the large slot up. The small slot should be up if using an adhesive button.



## STEP 2.

With the locking lever in the up position, press the suction cup firmly against the glass. Push lever down to attach to window. Photo 2. (Lever is colored orange for illustration purposes only).

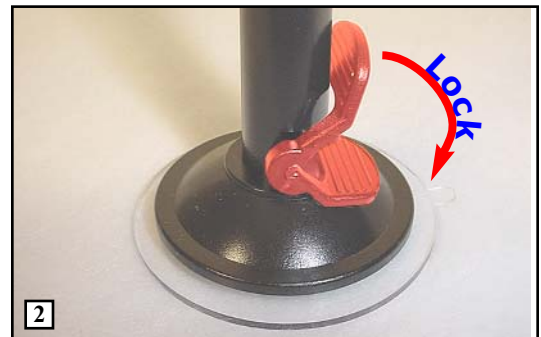

## STEP 3.

To attach an adhesive button, clean the button location with the alcohol swab and let air dry. Remove the adhesive backing, apply to the device and apply even pressure for 60 seconds. 3M Company recommends letting the adhesive 'cure' for 72 hours before using to achieve maximum adhesion.



Pro.Fit International, Inc.® may not be held liable for any damage to a vehicle before, during or after the installation or removal of this Pro.Fit Legend®. Pro.Fit may not be held liable for any personal injury resulting from accident or improper installation. Pro.Fit International, Inc.® 1335 Eagandale Court, Eagan, MN 55121, Ph: 651-688-3588 or 800-388-0073 Fx: 651-688-9876

