



UltiMount V2

PART NUMBER: UL-242BG

Pre-Installation Tips

The UltiMount V2 is designed to be mounted in one of several orientations on the dash or console of a vehicle. Before installing the UltiMount V2 determine the position where it will work best for the primary user. Be sure to attach the holder and/or device to the UltiMount V2 prior to exploring the ideal position for mounting.

The UltiMount V2 comes assembled as shown in Diagram 2. To change the configuration to that shown in Diagram 3, remove the decorative cap and phillips screw; remove and flip the flex pad to the opposite side of extension arm and reattach. The short configuration shown in Diagram 4 is useful in certain applications. Remove the flex pad as before, then remove the extension arm by loosening the phillips screw within the gray ball. Disconnect the ball/stem from the extension arm. Attach flex pad to the base of the stem; retighten screw to secure the flex pad.

Important: The flex pad adhesive is a one-time stick application. Therefore, it is best to determine the mounting position for the UltiMount V2 prior to installing. Once the flex pad is adhered to the mounting surface, it cannot be repositioned. Be sure to complete all Surface Preparation steps before installing the UltiMount V2.

Installation Instructions

Please read all instructions thoroughly before installing this product

Contents: UltiMount V2, Surface Preparation Packet, Alcohol Prep Pad.

Helpful items to have: Clean dry cloth, phillips screwdriver, four #6 bolts and nuts (if necessary for attaching cradle or device).

Important: Clean the surface where the UltiMount V2 will be installed with the Surface Prep Packet to remove the silicone emulsions such as Armor All®. Do not apply adhesive to leather surfaces. Do not install the UltiMount V2 where it could block your vision, airbags, gear shifter, climate controls, steering wheel, radio controls, or other amenities that may interfere with safe operations of the vehicle.

Step One:

Attach the holder/cradle or device to the UltiMount V2. Adjust (if necessary) the UltiMount V2 to the desired configuration (reference diagrams). Position and select the best mounting location on the dash or console of the vehicle where the UltiMount V2 is to be installed.



UltiMount V2

PART NUMBER: **UL-242BG**

Step Two:

Prepare the mounting surface by cleaning the mounting location with the Surface Preparation Packet provided. Wipe an area slightly larger than the flex pad in only one direction and do not use a circular motion. Dry the area with a clean, dry cloth. Wipe dry in the same direction as above.

Clean the same area with the Alcohol Prep Pad provided. Wipe in the same direction as above, dry with a clean cloth and allow to air dry completely. *Note:* The alcohol may leave a film on the surface. Wipe clean with a dry cloth.

Step Three:

It is best to remove the flex pad from the UltiMount V2 before adhering. Remove the decorative cap and phillips screw, then remove flex pad from the extension arm. Remove the liner from adhesive pad and adhere it to the mounting position. Apply firm pressure to the center and edges of the flex pad for a minimum of 1 minute. Let adhesive cure for 72 hours before reattaching the UltiMount V2. Ideal installation temperature is between 60° and 80°F.

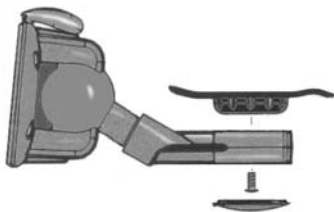
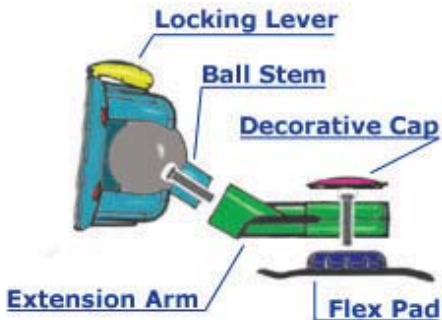


Diagram 2

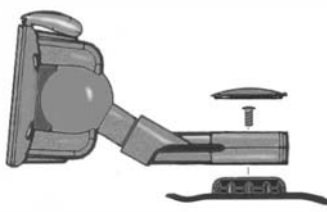


Diagram 3



Diagram 4

Pro.Fit International, Inc.® may not be held liable for any damage to a vehicle before, during or after the installation or removal of this Pro.Fit Universal Mount ®. Pro.Fit may not be held liable for any personal injury resulting from accident or improper installation. Pro.Fit International, Inc.® 1335 Eagandale Court, Eagan, MN 55121, Ph: 651.688.3588 or 800.388.0073 Fx: 651.688.9876